

HOME DECORATORS

collection[®]

ARTISAN MLTMD CBNT W/GLS DRS


Assembly Instructions

HDC #: 08066

MFG #:AT7102


Please read over the instructions; it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

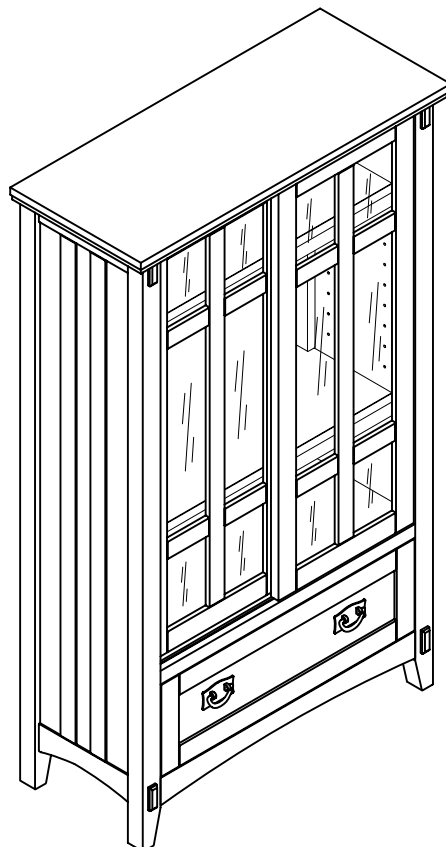


Parts Check List


Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

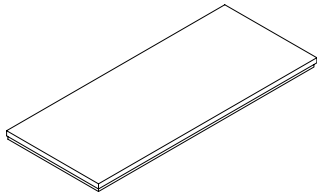


① Top Panel - 1

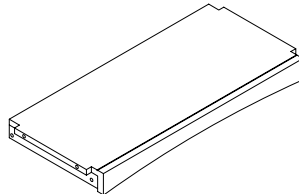


② Bottom Panel - 1

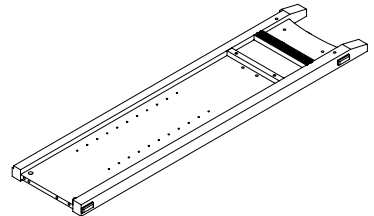


③ Left Side Panel - 1

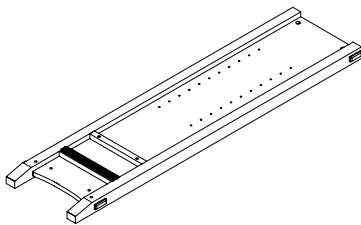


④ Right Side Panel - 1

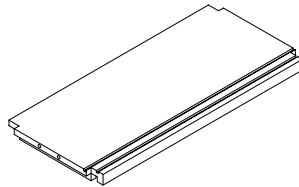


⑤ Fixed Panel - 1

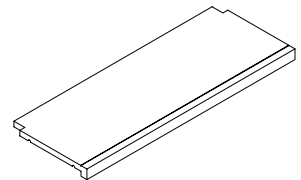


⑥ Adjustable shelf - 2




⑦ Door - 2

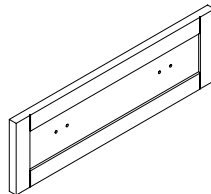


⑧ Drawer Face Panel-1

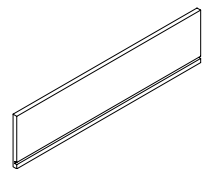


⑨ Drawer Back Panel-1




⑩ Left Drawer Side Panel-1



⑪ Right Drawer Side Panel-1

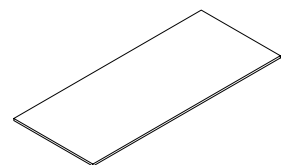

⑫ Drawer Bottom Panel-1



⑬ Back Panel-1

Hardware Check List

Please take all the hardware listed below out of the hardware bag.



Cam-Bolt - 4



Cam-Lock - 4



Cover - 4



Wood Dowel - 12
(Ø8×30mm)



Glue - 1(25g)



Allen Wrench - 1



Allen Bolt - 8 (Ø1/4"×1-1/4")




Lock Washer - 8 (Ø1/4")



Flat Washer - 8 (Ø1/4"×16D)




Drawer Hand Pull - 2



Long Bolt - 4(Ø5/32"×5/8")




Shelf Support - 8



Long Screw - 8
(#8×1")





Round Head Screw - 30
(#6×14mm)






Tilting Prevent Screw-1set

When inserting cam-bolts, the shoulder should be flush with the surface. If using an electric screwdriver, be careful not to over tighten the Cam-bolt, this can cause damage .

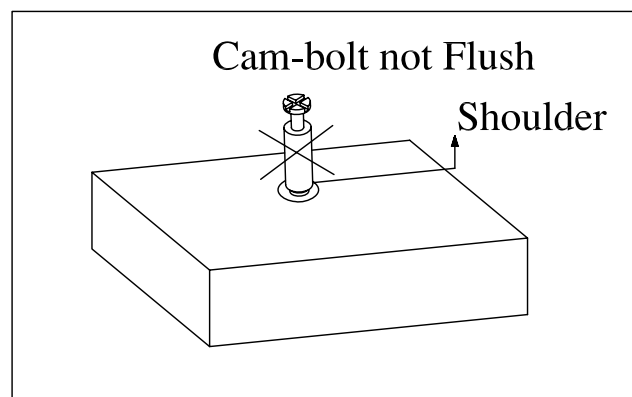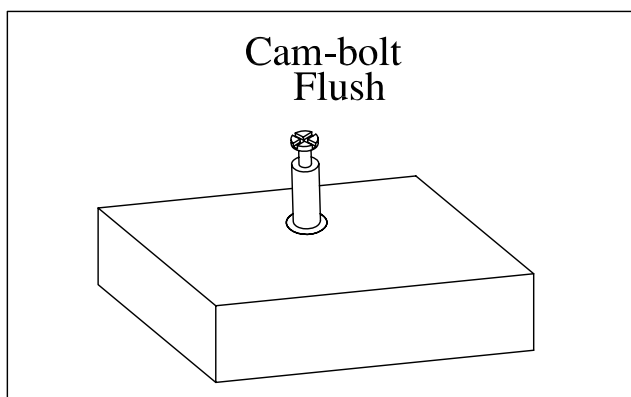


How to use Cam-Locks


Cam-locks should be inserted into their designated holes with the arrow pointing to the nearest edge. The coordinating Cam-bolt will be inserted into the Cam-lock. Using the allen wrench or a flat-head screwdriver, tighten the Cam-locks until you feel resistance. Over tightening the Cam-lock may break the cam-lock.

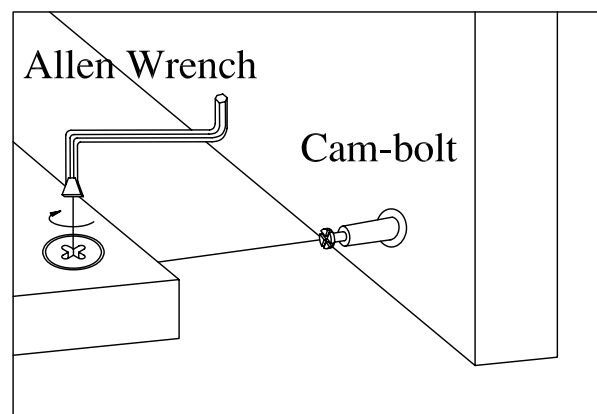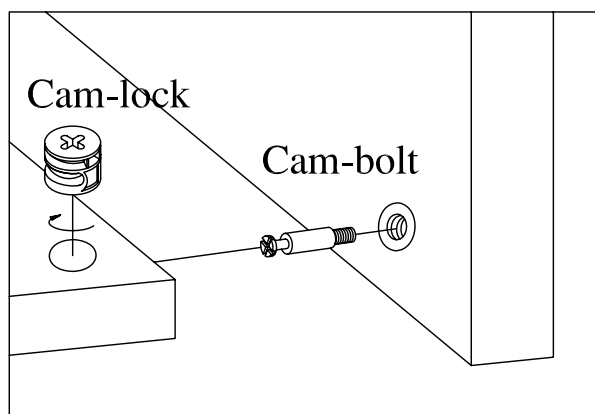


1. Fill the middle holes on Bottom Panel(2), Side Panel (3&4), and Fixed Panel(5) 1/4 with Glue(E). Then insert Wood Dowels(D). Screw Cam-bolts(A) into the threaded holes in Top Panel(1). See figure below:

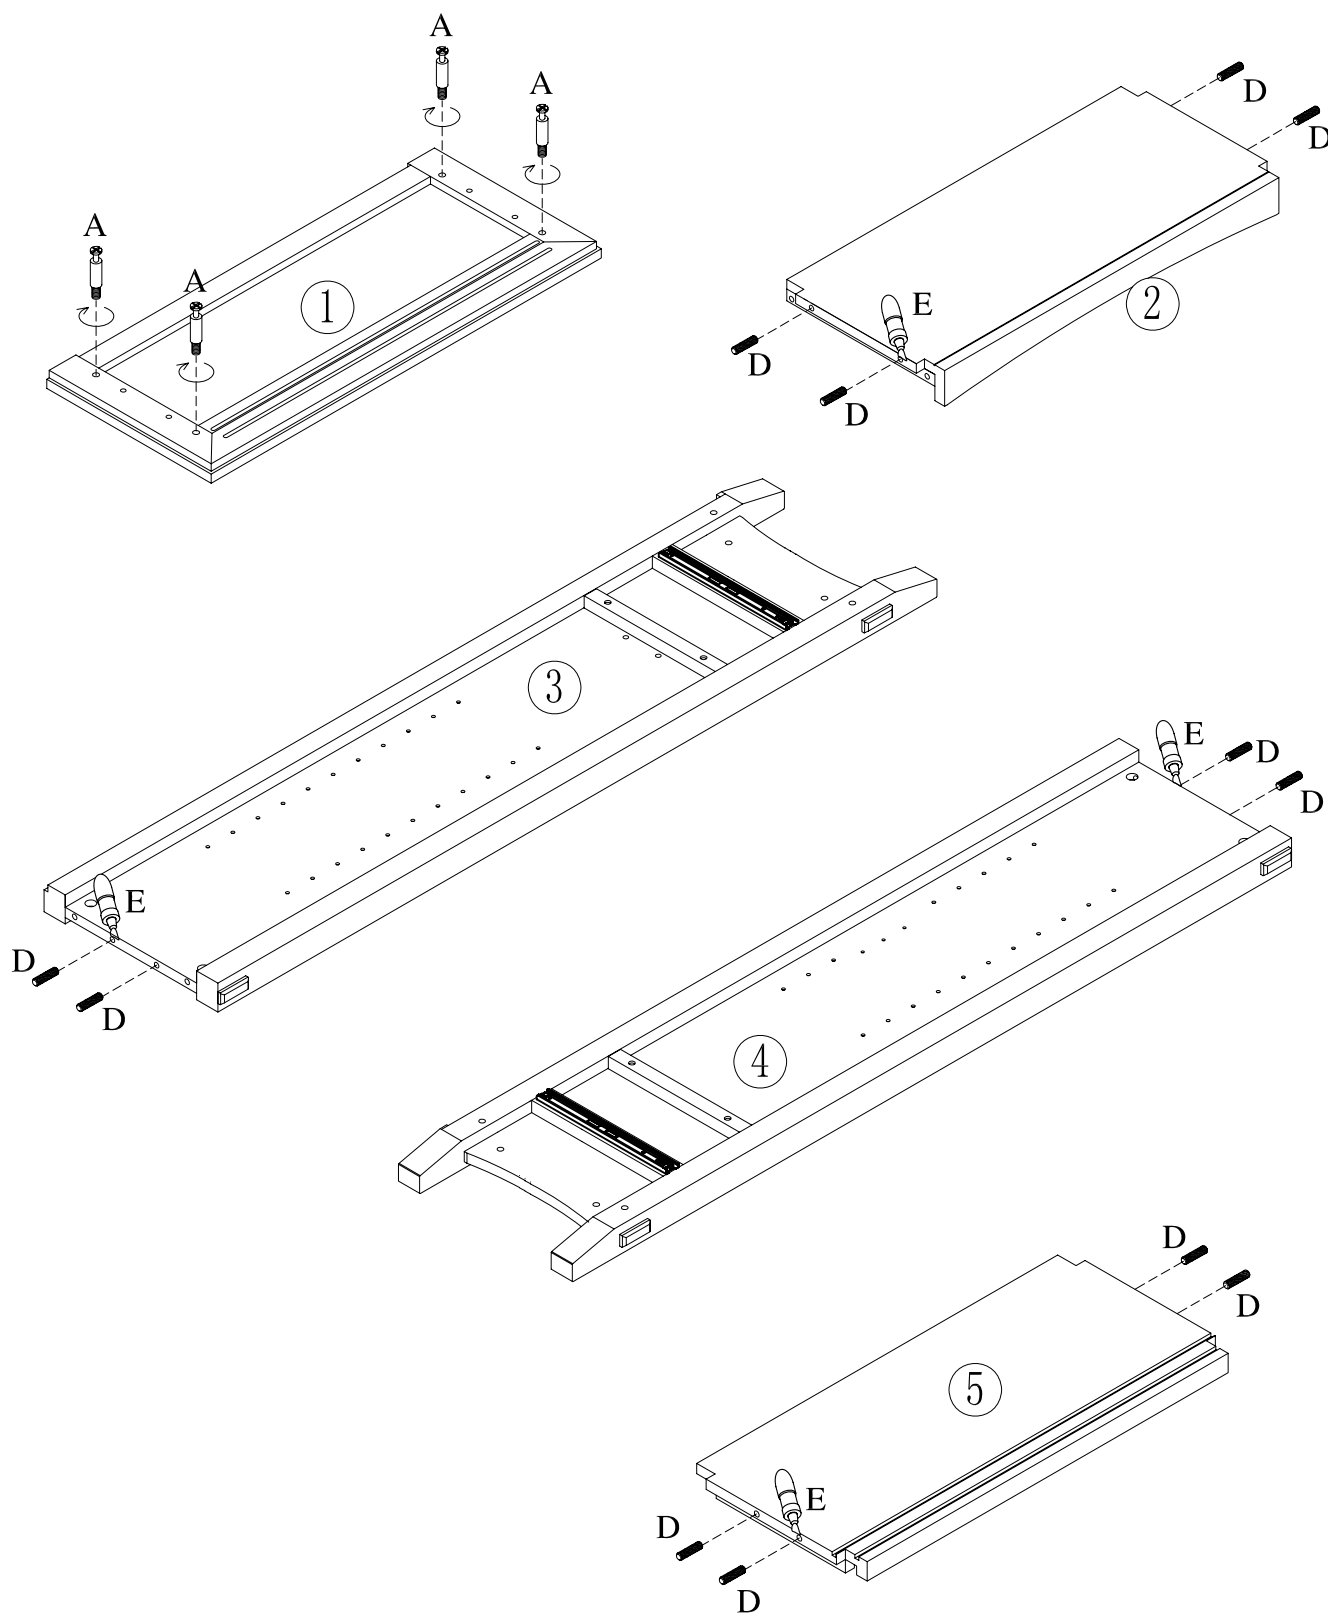


2. Attach Bottom Panel(2) and Fixed Panel(5) to Side Panel(3&4) with Allen Bolts(G) through Lock Washers(H) and Flat Washers(I) by Allen Wrench(F).
 3. Attach Top Panel(1) to Side Panels(3&4) with Cam-locks(B) by Allen Wrench(F). Cover all Cam-Locks(B) with Covers(C).
- See figure below:

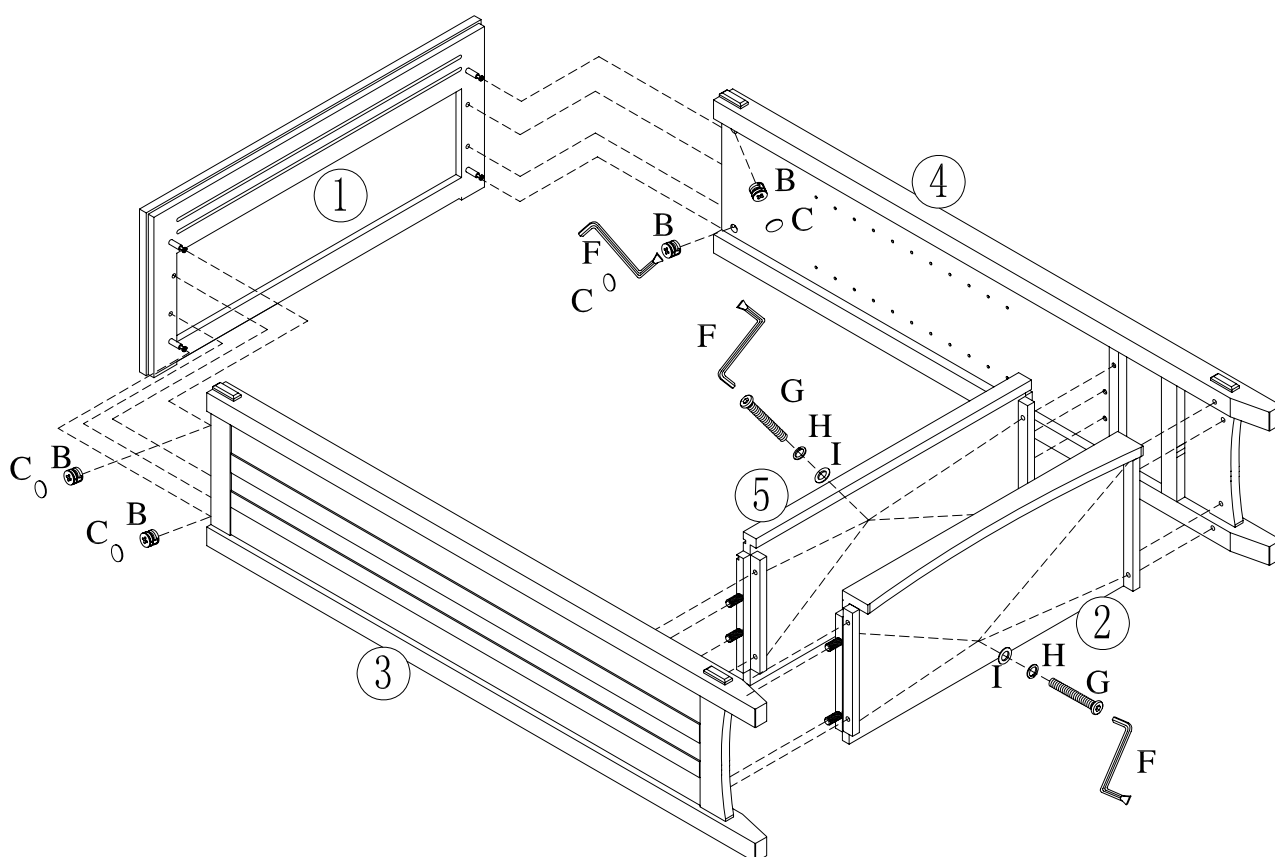


9. Attach the drawer as figure shows.
Install the Hand Pull(J) to the drawer face with Blot(K) by screwdriver.
See figure below:

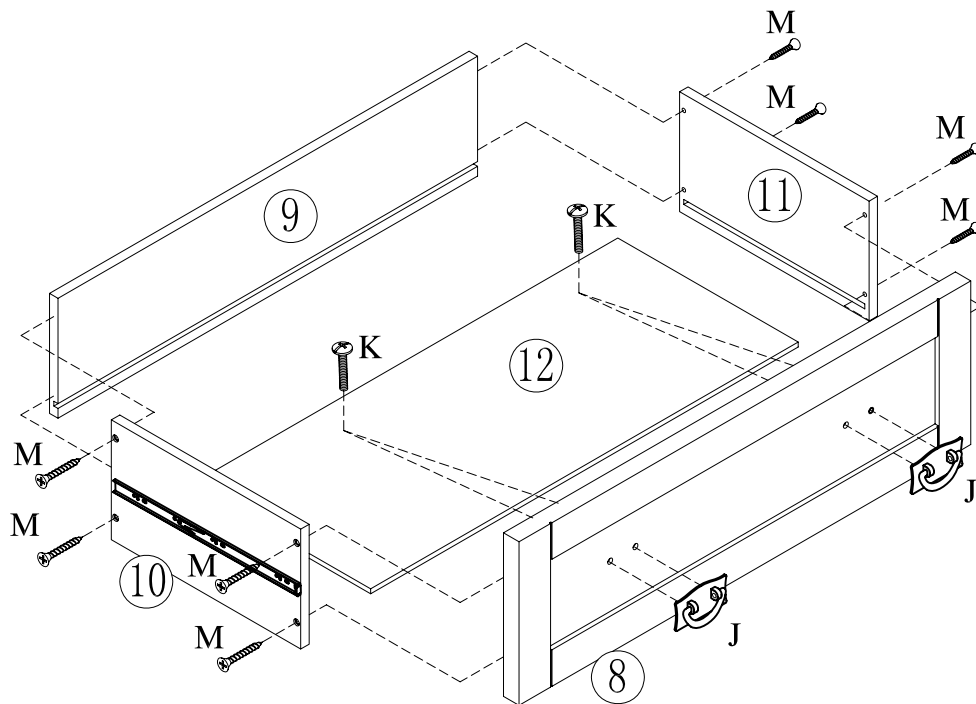

5. Place Shelf Support(L) into the holes on Side Panel(3&4).
Place Adjustable Shelf(6) onto the Supports(L).
See figure below:

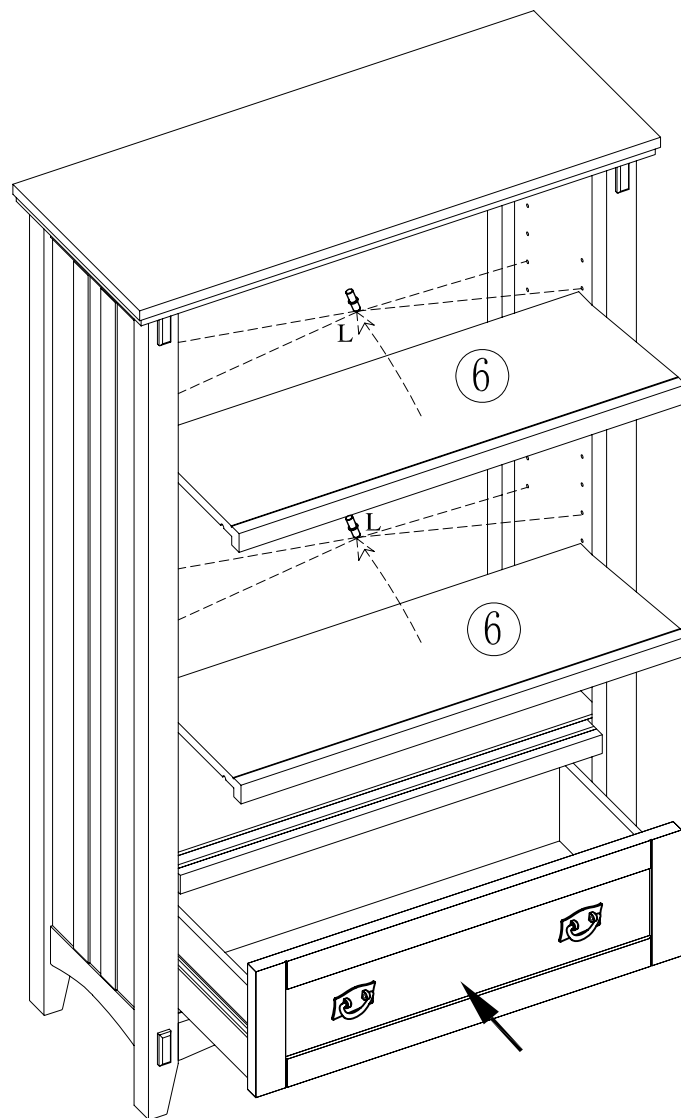


6. Attach the glide Door(7) to the groove.
See figure below.

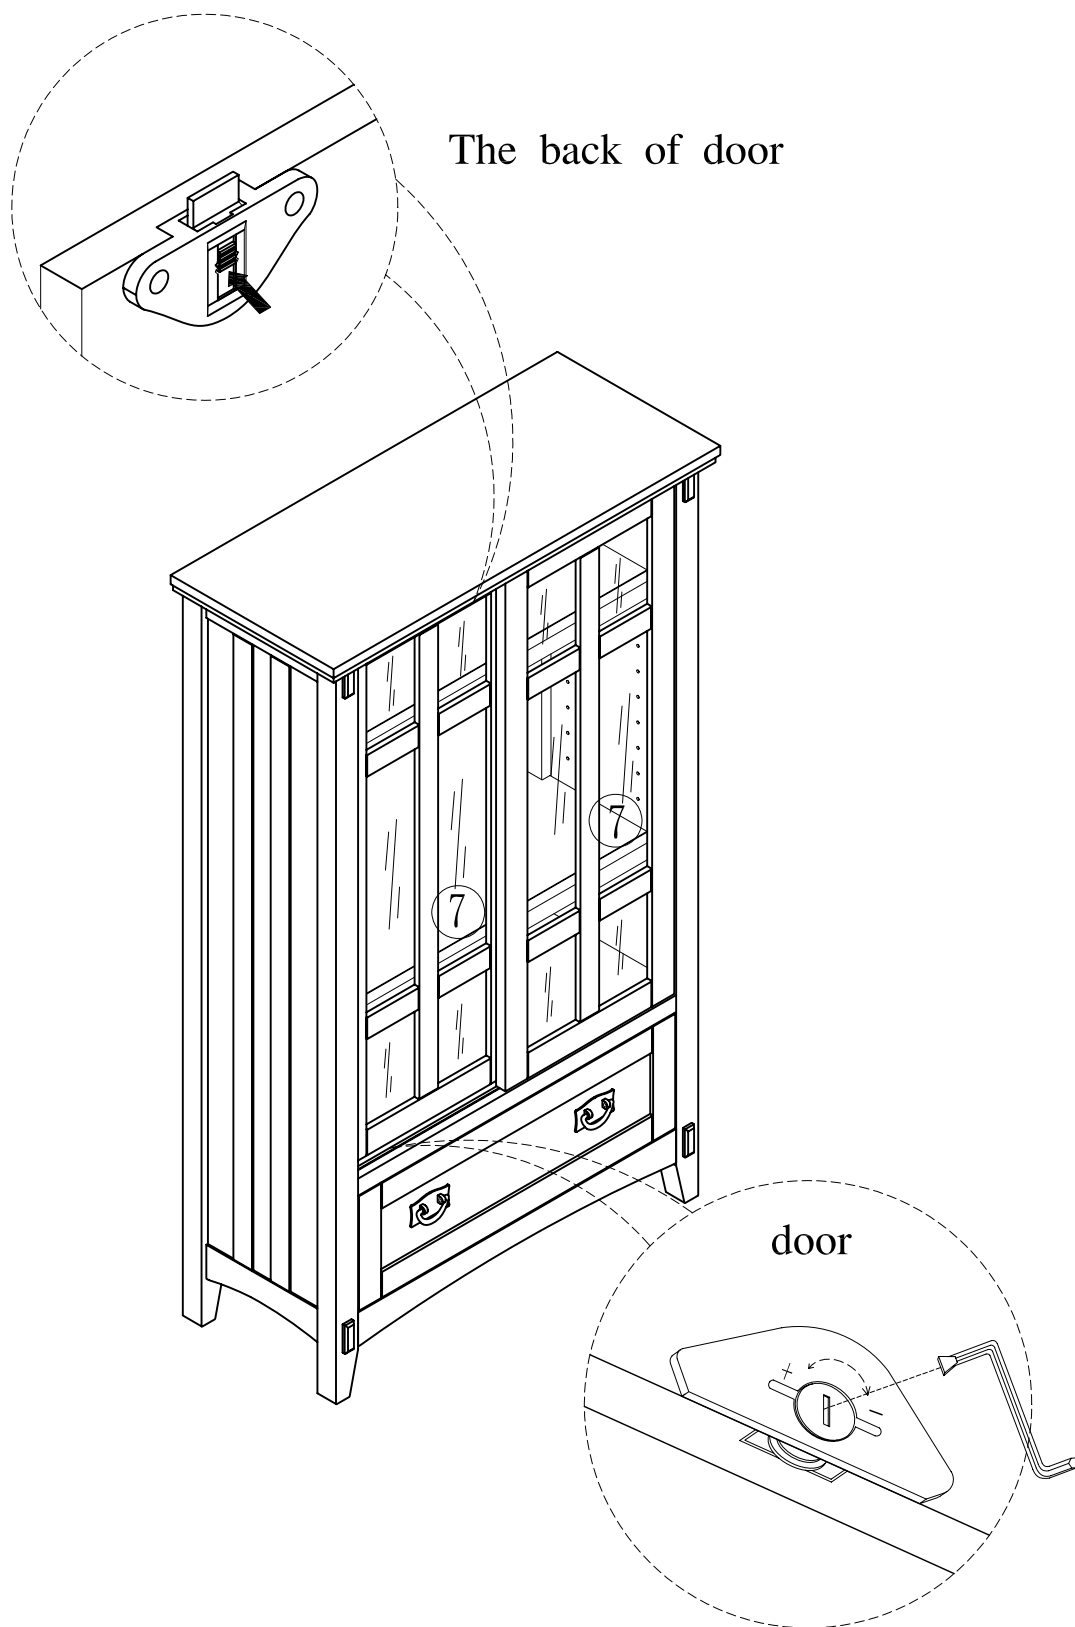


7. Before attaching back panel, be sure the space around the doors are even. If not even, shift the unit either right or left, whichever needed. Then attach the Back Panel (10) with Round Head Screw(N).

See figure below:

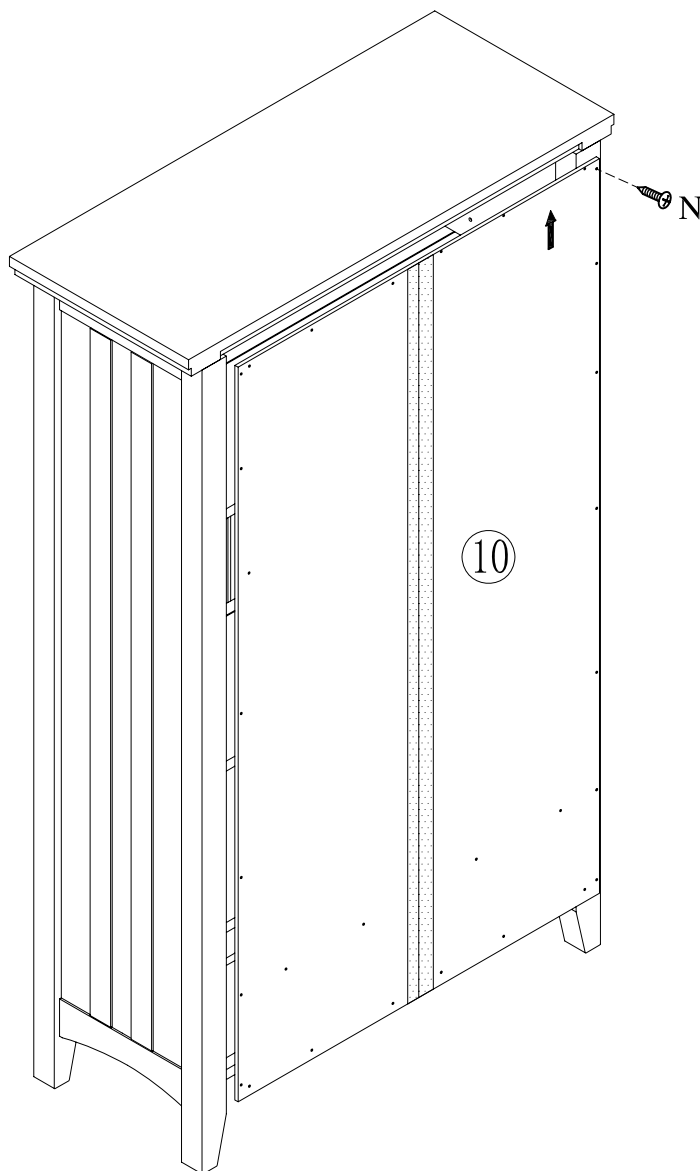

8. Tip prevention hardware is included to attach the item to the wall.
See figure below:

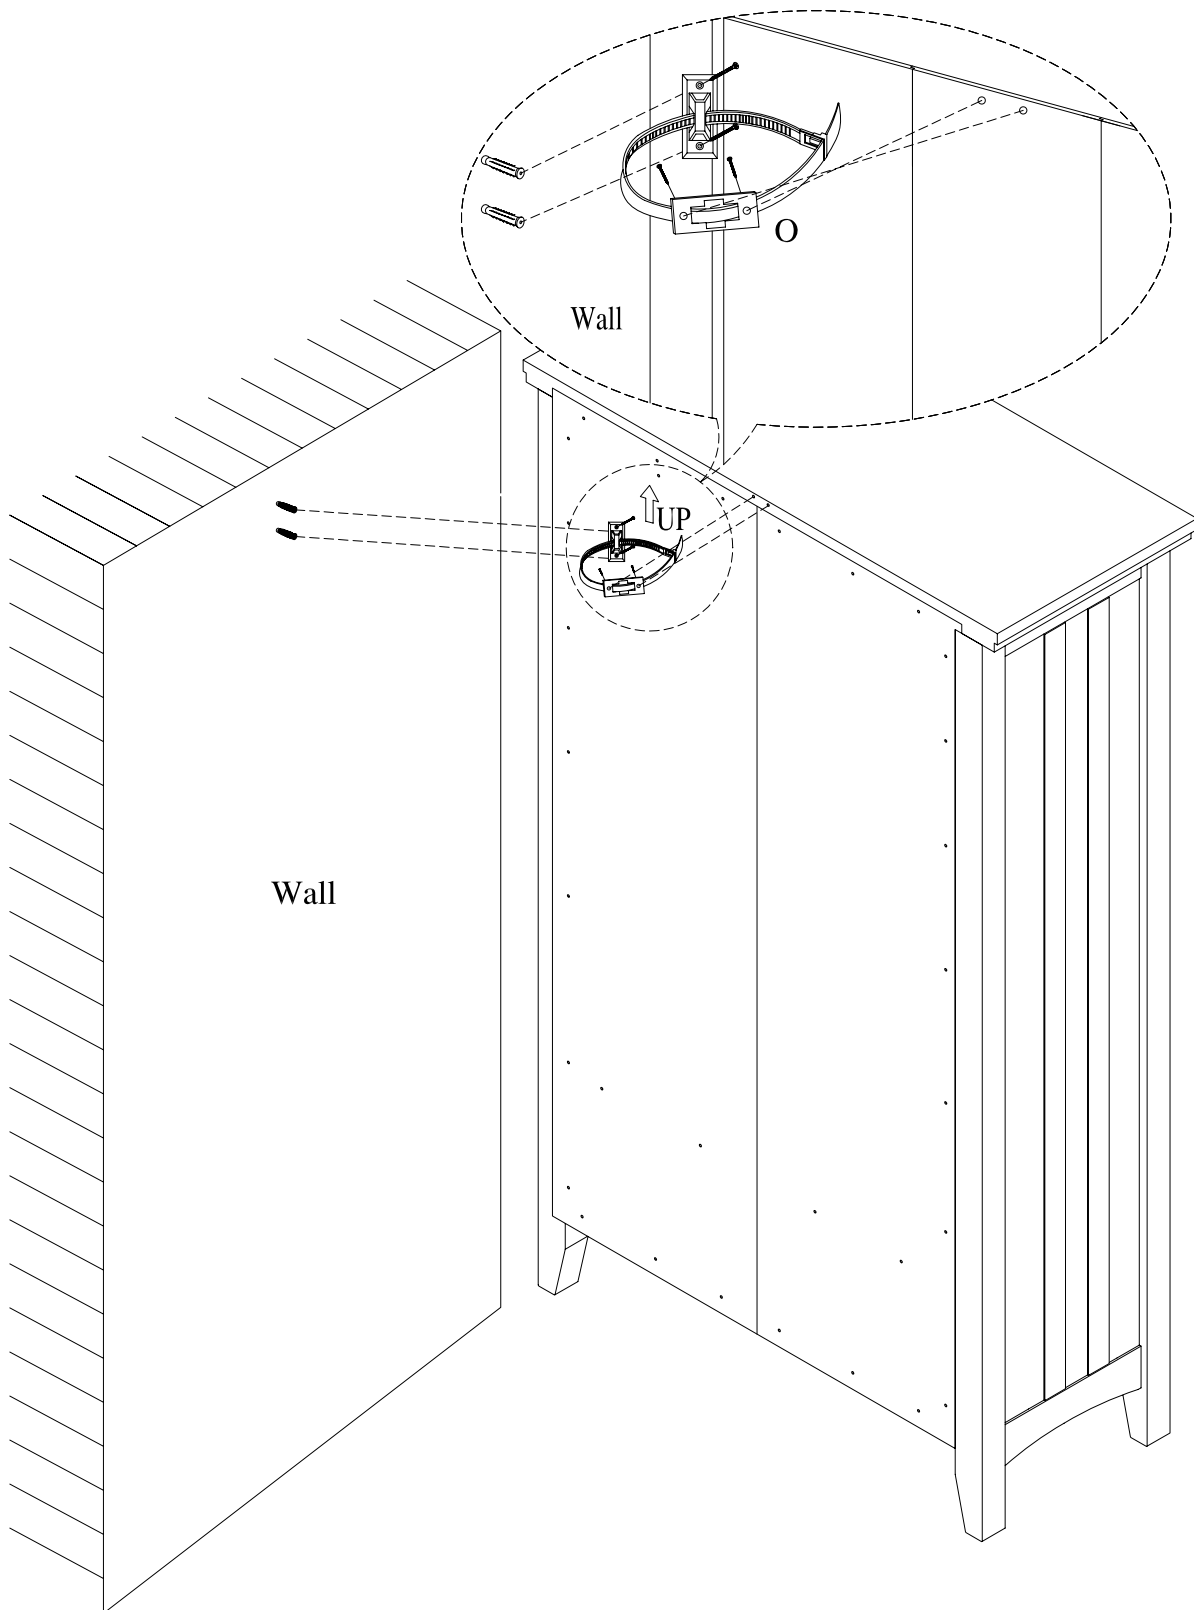

Assembly is now complete!